


SINGLE CAN HOLDER

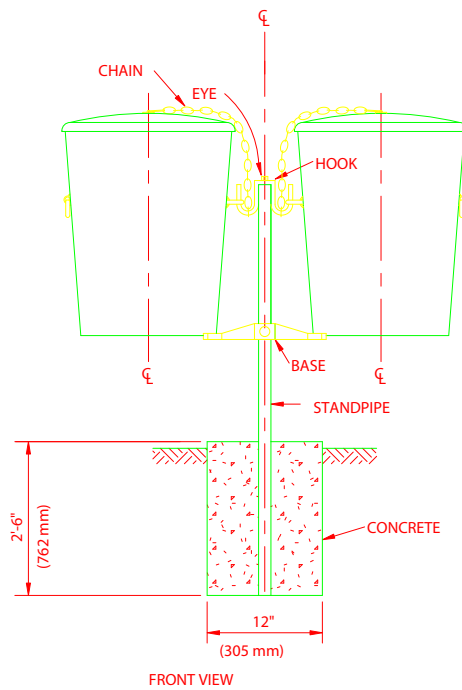

DOUBLE CAN HOLDER

NOTES:

1. PLACE PIPE DOPE OR WHITE LEAD ON ALLEN SET SCREW BEFORE PUTTING SCREW IN PLACE TO PREVENT FREEZING TO ALUMINUM BASE.
2. DRILL HOLE IN HOOK FOR PADLOCK.
3. SPECIFIC CAN HOLDER DIMENSIONS SHALL DEPEND UPON MODEL INSTALLED. SEE THE SPECIFICATIONS.
4. THE METRIC CONVERSIONS ARE PROVIDED IN PARENTHESIS FOLLOWING THE ENGLISH UNITS.